



XpertFlu

Nasopharyngeal Sample Collection :


Please use for sample collection flocked swab & UTM (CE- NASL-100N-100 Sample Collection Kit).

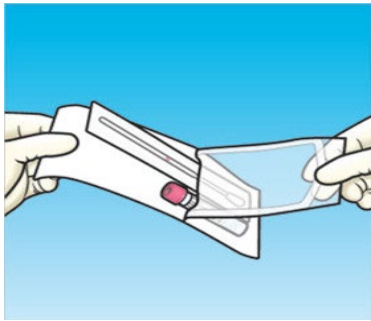


1. Open the package .

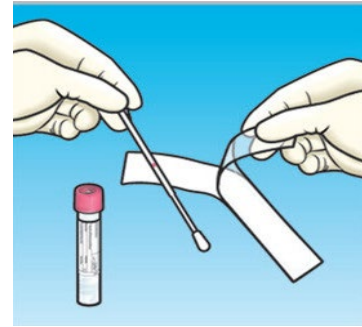


2. Remove the swab from the package.

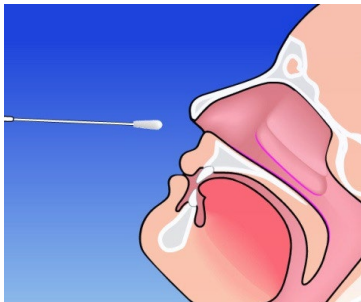



3. Carefully insert swab into nasal passages

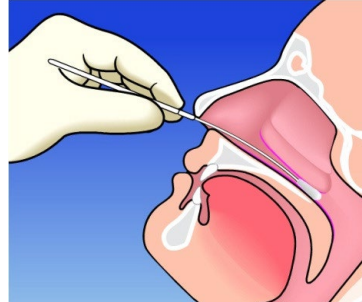


5 . Gently rotate swab 2-3 times

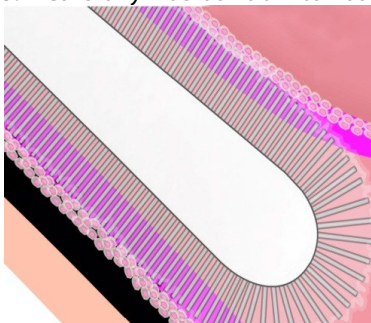


4. Hold for up to 10 seconds to allow absorption

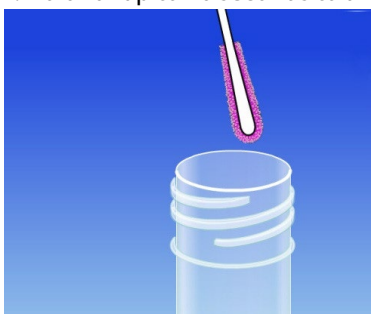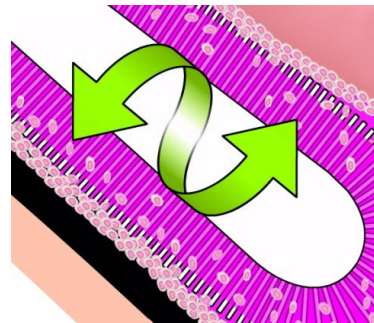

6. Remove swab and place in UTM medium tube

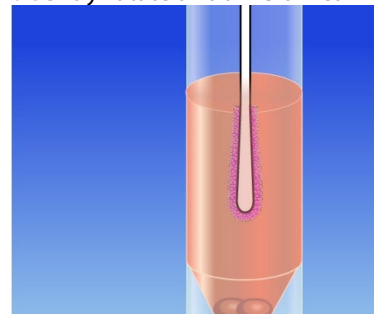

7. Break swab applicator at the molded breakpoint

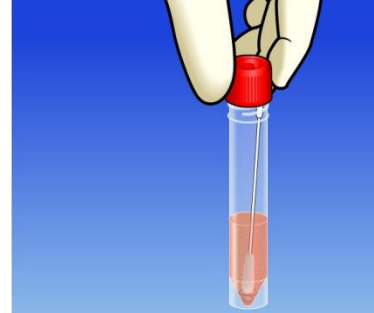

8. Screw cap to close securely